# Tamagotchi Smart 25th Anniversary Set

For Ages 6 and Up

©BANDAI

## User Manual

たまごっちスマート

●Clock accurate ±10 seconds per day

●Images in manual may vary slightly from actual product. ●Images are illustrations.

## ⚠ DANGER

Guardians: Read Before Use

**●Contains small parts. To prevent risk of choking or strangulation, keep out of reach of children under 3 years of age.**

## ⚠ WARNING

●Read Instructions before use. ●Part of this product's electrical components contains magnets. Keep away from pacemakers. 《Internal rechargeable battery carries risk of heat/damage/fire upon malfunction. Follow the warnings below.》 ●Do not use high-voltage power to charge as it is dangerous and may cause unit to short-circuit. ●Do not attempt to re-charge a fully-charged Tamagotchi Smart unit to prevent danger of overcharging. ●Stop use immediately if unit gets wet to prevent short-circuit. ●Do not immerse in water or fire, disassemble, or use soldering iron on unit. ●Do not use, charge, or store near fire or in locations with high temperatures or humidity. ●Comply with local ordinances when disposing of unit. ●Monitor while charging and make sure there are no flammable items nearby. ●Before charging, check the unit and cable are fucntioning properly. Immediately stop use if any components are damaged to prevent risk of accident. ●While charging, if the unit malfunctions by becoming hot, smelling strange, puffing up, or emitting smoke, remove cable and immediately discontinue use of product. ●Confirm charging status by accessing [じょうたいせってい]→[せってい]→[でんちかくにん] (more info on P.4). If the "charge in progress" screen is not displayed despite cable attachment, or if charging has not completed within 2 hours, remove charging cable and immediately discontinue use. ●When unit has completed charging, remove cable immediately. Do not leave plugged in. ●Do not wrap cable around finger. Doing so runs the risk of cutting off blood circulation. **●This English translation is unauthorized and fan-made. Translator is not liable for any potential damage done to user's Tamagotchi Smart while following the instructions in this User Manual.**

<Use with Caution> ●Dispose of plastic packaging after opening. ●Do not place this product on vinyl sofas, sheets, or tiles. Product may stain after long periods of contact. ●Do not pull or bend moving/connecting parts in directions they do not naturally go. ●This product is made of delicate electronic parts. Do not drop, get wet or dirty, or disassemble. Avoid storage in excessively hot/cold locations. ●If error occurs, turn unit off then on again. ●Only use the cable provided to charge this product. Do not use third-party charging cables. ●When removing charging cable, hold the connector and do not pull with excessive force to prevent damage and malfunction. ●Do not use in temperatures under 5 degrees Celsius (41 degrees Fahrenheit). The internal battery will not operate properly, which may lead to operational errors. ●BANDAI is not liable for any data loss that occurs during use.

《Apology》 As BANDAI is constantly researching, analyzing, and improving ways to deliver even more safe and fun products, there may be slight differences between the same product depending on time of purchase.

## Contents


■Source Data — 2
■Unit Diagram — 2
■Attaching Cover to Unit — 2
■Basic Operation (Selection, Scrolling, etc.) — 3
●Charging the Unit — 4
●Powering On — 4
●Basic Settings — 4
●Letter Input — 5
●Screen Display — 5
■Tamagotchi Life (Bond with Tamagotchi/Room & Yard, etc.) — 6
■Care Methods (Communication Mode...Pet/Call/Chat, etc.) — 7
●Care Icon Screen — 8
●Status・Settings — 8
●Assistance (Sickness/Abandonment/HouseSit) — 10
●Meal・Snack — 11
●Toilet・Bath — 11
●Possessions (Items/Accessories, etc.) — 12
●Apps (TamaDelivery/TamaShopping/TaMatching App/TamaSelfie) — 13
●Go Out (Park/TamaWork) — 14
●Connect (Tamagotchi Smart/TamaSma Card/Friends List) — 15
■Troubleshooting — 18
●Pressing the Reset Button — 19
●Charging Without a Computer: Approved USB Charging Adapters — 19

## Source Data

Based on the 25th Anniversary Set Manual.
Source: https://toy.bandai.co.jp/manuals/pdf.php?id=2574565

Translated by OldSchoolVPQ
http://oldschoolvpq.tumblr.com

**Have fun!!**

Li-ion

This product contains a Lithium Ion Polymer Battery. Please comply with local regulations when disposing of the Tamagotchi Smart.

## Unit Diagram

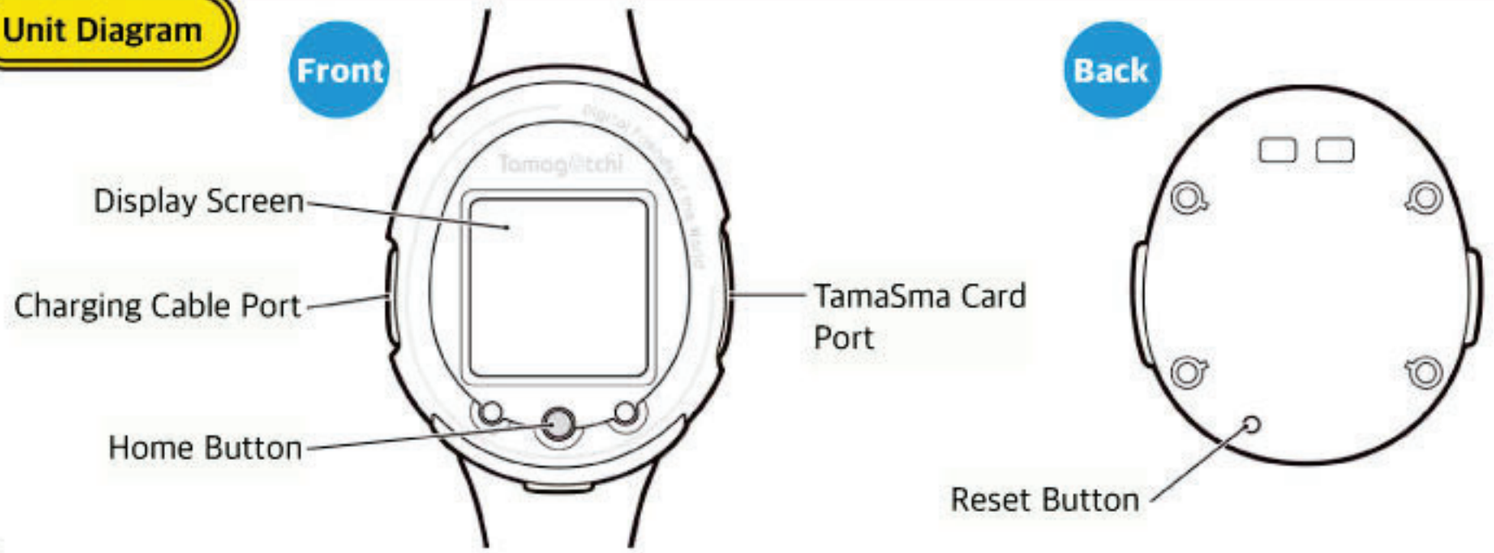


## Attaching Cover to Unit

### Unit

<View from Top>



<View from Bottom>



There are three indentations on the Tamagotchi Smart Unit. (2 on top, 1 on bottom)

### Cover

<Cover Backside>

There are three protrusions on the inside of the Cover. (2 on top, 1 on bottom)

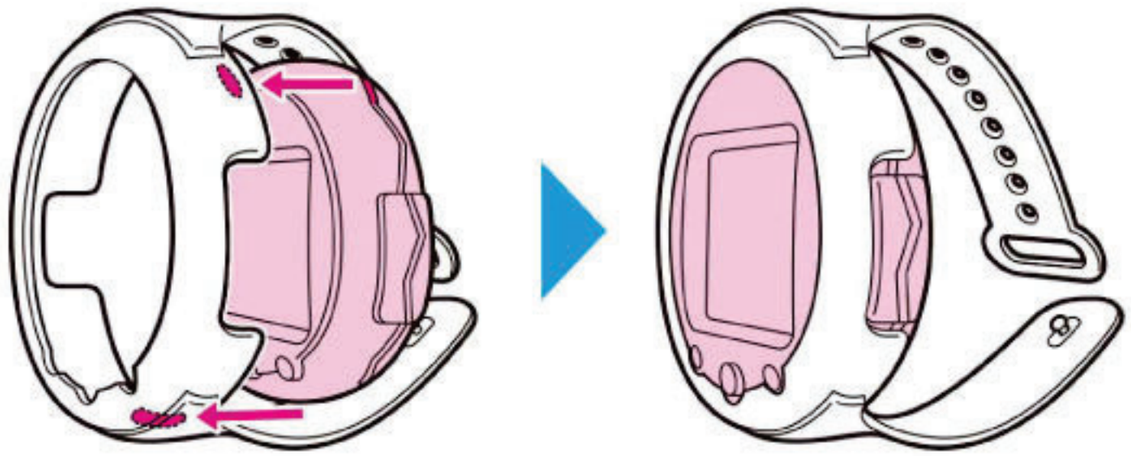

Slide the Cover over the Tamagotchi Smart Unit, then align and connect the 2 top and 1 bottom protrusions/indentations to secure.

※Translator's Note: To attach to wrist, pull end with peg upward through loop, then gently push peg through hole on band until secure. To remove, pull end with peg gently upward until hold releases. According to packaging, band will fit wrists 12.5~18.5 cm (4.9~7.2 in) in diameter.

## Selection

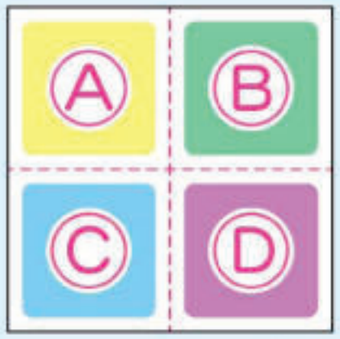


The Tamagotchi Unit's Screen is split into 4 Touch Sensor Areas.

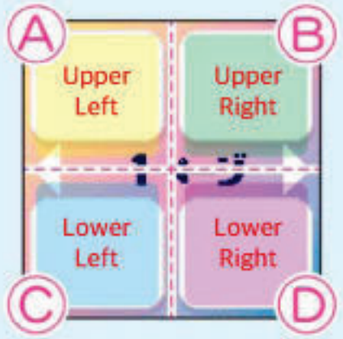


As shown above, Touch
A to select the upper left choice,
B to select the upper right choice,
C to select the lower left choice, and
D to select the lower right choice.

Touch the AB area to select the top, and the CD area to select the bottom.

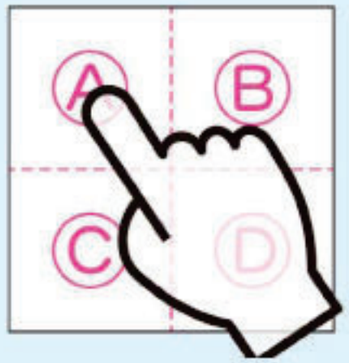


To make a selection, use finger to press screen (~1 second) until you hear a sound effect.

## Scrolling

When a triangle mark appears on the Screen, move your finger in the direction shown by the red arrows to Scroll.

### Scroll Left <Slide Right>

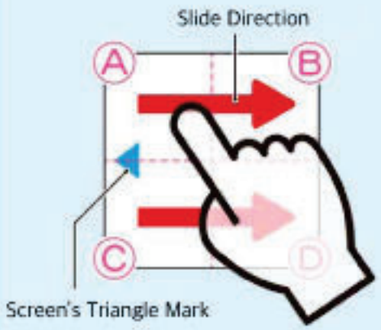


To Scroll Left, move finger from A to B or C to D

### Scroll Right <Slide Left>

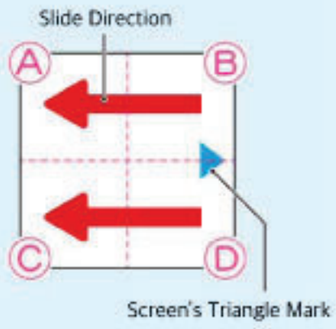


To Scroll Right move finger from B to A or D to C

### Scroll Up <Slide Down>

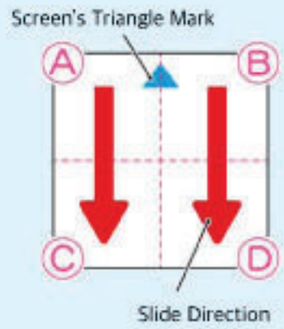


To Scroll Up, move finger from A to C or B to D

### Scroll Down <Slide Up>

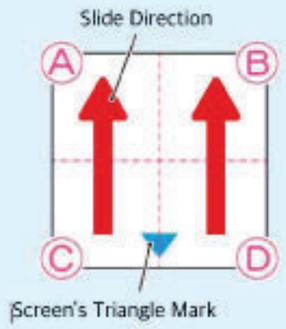


To Scroll Down, move finger from C to A or D to B

## Cancel/Back

Press the Home Button to return to the previous screen.

## Charging the Unit

① Charge Unit when the Low Batt Screen appears.
Only charge when Unit is removed from wrist.
※ Plugging the Charging Cable into the Unit while the Low Batt screen is displayed will not trigger the Charging Screen.
To confirm charging status, select
[じょうたい·せってい]→[せってい]→[でんちかくにん]
(Status·Settings → Settings → Battery Check)

Low Batt Screen

② Use fingertip to remove Cover of Charging Port on side of Unit, then insert micro-USB side of cable into Port.

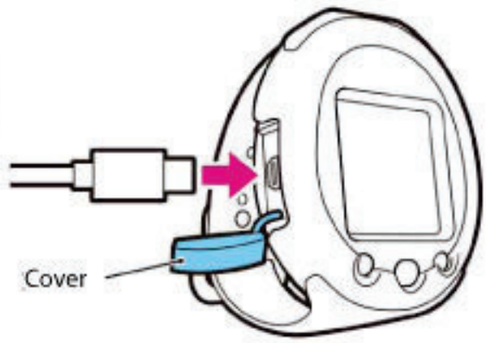


③ Plug opposite end into computer's USB port.

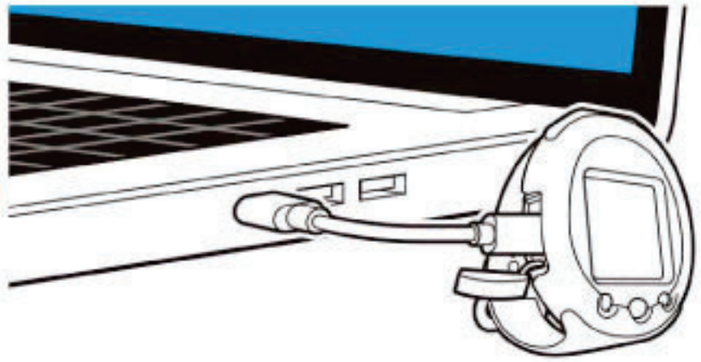

※Charging requires computer or approved USB AC Adapter.
See **[Approved USB Adapters]** section for details. (→P.19)

④ Remove Charging Cable as soon as charge is complete.
※ If the「じゅうでんちゅう」(Charging) screen doesn't appear, or if 2 hours have passed and the「じゅうでんかんりょう！」(Charge Complete!) screen does not appear, remove Charging Cable and discontinue use.

Charging Screen

Charge Complete Screen

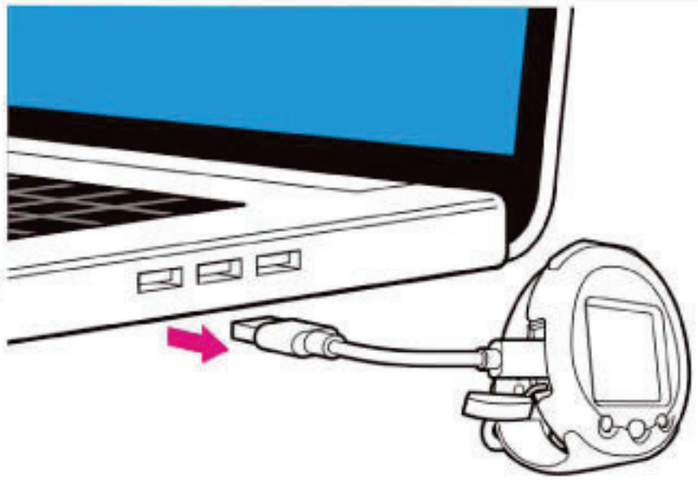

### Battery Check

To confirm charging status, access
[じょうたい·せってい]→[せってい]→[でんちかくにん]
(Status·Settings → Settings → Battery Check) (→P.9)

Charge in Progress

Fully Charged!

●Battery in Use

Charge: High

Charge: Mid

Charge: Low

Needs Charge!

## Powering On

On Tamagotchi Smart Unit, press Home Button for ~5 seconds.

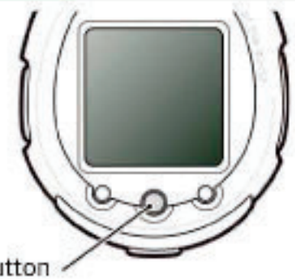

Home Button

Start-up Screen

**Troubleshooting...**If Unit doesn't turn on, press the Reset button, then try pressing the Home Button again for 5 seconds.
If it still doesn't turn on, the battery charge may be low.
Charge for around 2 hours before use.
※Only use the included Charging Cable to charge.
※Remove Tamagotchi Smart from wrist before charging.
※Charge status cannot be checked before completing Initial Setup.

## Initial Setup

Touch the A and B Areas to pick numbers, then "Confirm" by touching C Area.

**<Date/Time Input Screen>**

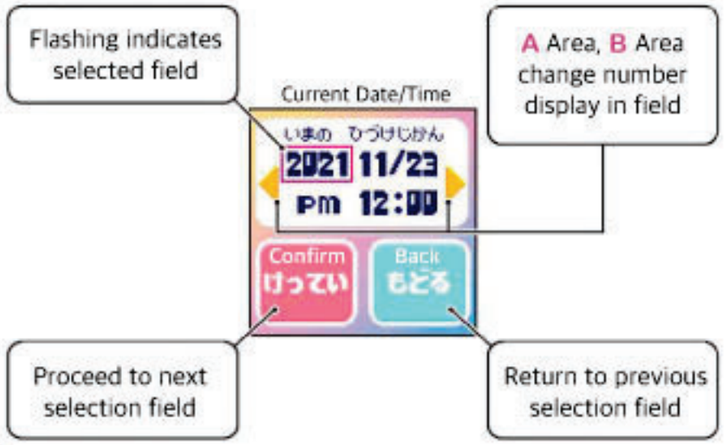


**<Birthday Input Screen>**

## Letter Input

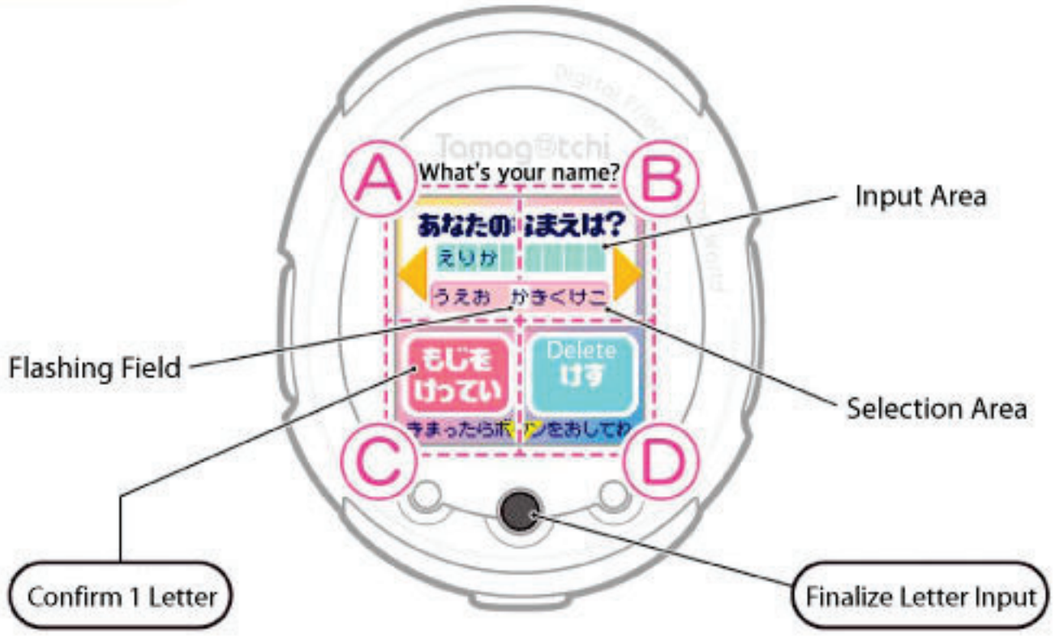


①To input letters, select them 1 at a time.

**Touch A or B Areas**...Move Flashing Field for Letter Input
**Touch C Area**...Confirm Flashing Field input selection
**Touch D Area**...Return to previous Letter Input Field

②Press Home Button to finalize Letter Input.

※Translator's Note: Up to 8 Hiragana, Katakana, English letters (Romaji), Numbers, or Special Symbols may be selected.

**<Letter Input Example: Name "ERI">**

①Touch B Area until Flashing Field is over "E"
②Touch C Area to confirm selection of "E"
③Touch B Area to confirm selection of "R"
④Touch C Area to confirm selection of "R"
⑤Touch A Area until Flashing Field returns to "I"
⑥Touch C Area to confirm selection of "I"
⑦Press Home Button to set name

## Screen Display

From the Standard Idle Screen, you can view Care Icons or head out to the Yard.

**<Yard Idle Screen>**

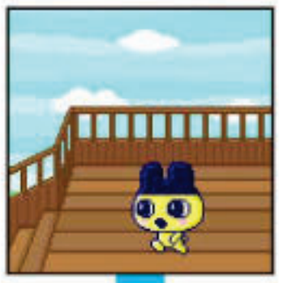

Home Button

A→B Area Screen Slide

B→A Area Screen Slide

**<Standard Idle Screen>**

Home Button

B→A Area Screen Slide

A→B Area Screen Slide

**<Clock Screen>**

Home Button

Scroll vertically C→A or D→B (Opposite order A→C or B→D)

**Change Clock Design**

**<Care Icon Screen>**

Scroll through via C→A or D→B Slide

Scroll through via A→C or B→D Slide

※ For more details, see **[Care Methods]** (→P.8)

# Tamagotchi Life

## Growth

Tamagotchi change their appearance and other qualities as they grow.
The care you give influences these transformation patterns,
so try lots of caretaking methods.

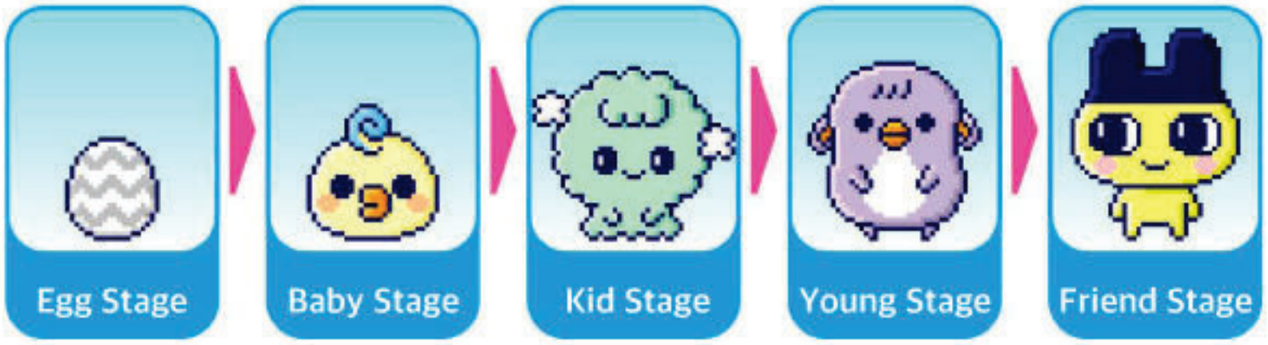

Feed them when they're hungry!

Give them a bath.

They sleep in a bed.

Let's go to the Park!

## Bond with Tamagotchi

Get friendly with your Tamagotchi!
As Tamagotchi grows fonder, you might get to see something special...!?
Actions such as those below will increase "Fondness"! (→P.8)

Give them pats!

Talk to them!

Feed them snacks!

Play with Items!

As Tamagotchi gets to know you better they'll greet
you with a smile and talk about all sorts of things!
They might even give you gifts...!?

## Room & Yard

### Living Room

The room where your Tamagotchi lives.
Pay attention, as the interior decorations
change according to the seasons!

### Yard

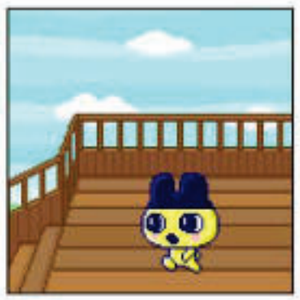

Outside the Room is a terrace-style yard.
The appearance changes based on time and weather!
Other Tamagotchi might visit to give you gifts...!?
※Baby Stage Tamagotchi cannot visit the Yard.

### Lots of Seasonal Events!

Special events only happen on certain days!
Enjoy the passing of the seasons!

# Care Methods

## Communication Mode

Pet Tamagotchi's head, talk to them, and become friends!

**<Communication Mode Screen>**

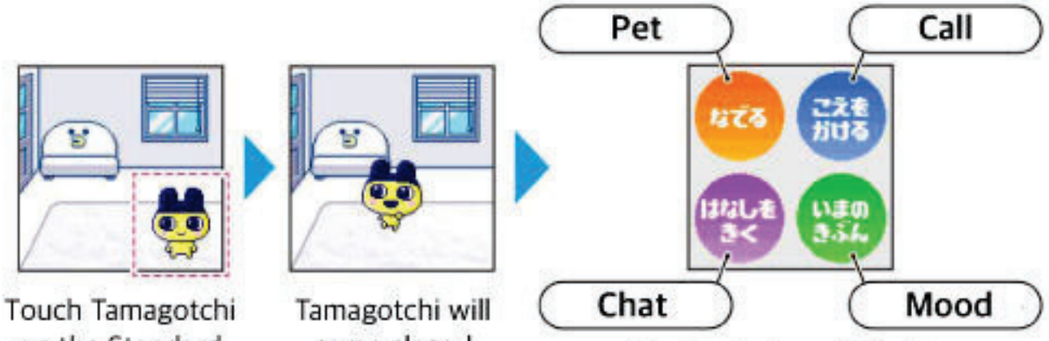


Touch Tamagotchi on the Standard Idle Screen

Tamagotchi will come closer!

Touch what you'd like to do with Tamagotchi!

## Call

**Tamagotchi will answer when you call!**

「」indicates they're waiting to hear you! Speak facing the screen!
「」indicates your voice is reaching Tamagotchi!

When they hear your voice, Tamagotchi will respond!

※Translator's Note: Official website has stated that Tamagotchi Smart cannot process speech, and response text is randomly generated based on time of day and Tamagotchi's mood.

Tamagotchi can't hear you if you're over 10 cm away! Make sure to speak loudly near the device. (~2-4 inches)

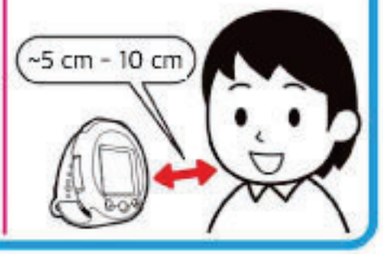


## Pet

**Give Tamagotchi lots of pats!**

Make Tamagotchi Happy!

**Pat Head**

Slide Between AB Areas

**Pet Face**

Slide Between CD Areas

DISLIKE! Tamagotchi will get angry

**Poke**

Tap A or B

**Pet Vertically**

Slide between AC or BD

**Twist Face**

Slide ABDC in a circle!

If Tamagotchi is having trouble falling asleep at night, pat their head!
If you poke Tamagotchi awake in the morning, they'll let you have it!

## Chat

**Hear what Tamagotchi has to say!**

Tamagotchi might ask you questions!

Touch to pick your answer!

**Scroll**

Slide Up and Down

If your Tamagotchi is fond of you, they might remember your answer!

They'll give you feedback on your caretaking, too!

## Mood

**See how Tamagotchi is feeling!**

How's Tamagotchi feeling today?

If they're upset, give them snacks to encourage "Fondness"!

## Care Icon Screen

Use lots of Icons to care for Tamagotchi! Touch the corresponding Icon for the Menu you'd like to use.

**<Standard Idle Screen>**

Press the Home Button while on the Standard Idle Screen to open the Care Icon Screen!

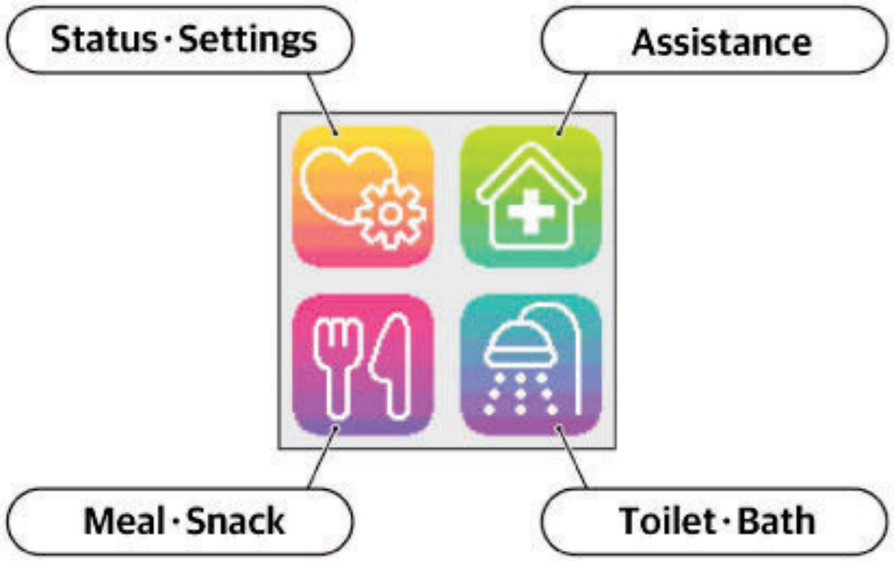


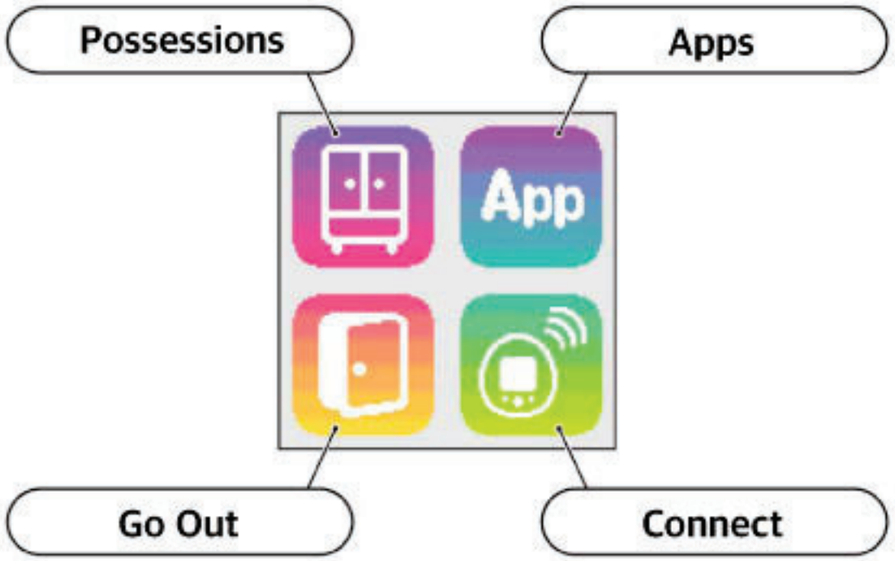


**Scroll**
Slide Up and Down

※While Tamagotchi is asleep, only "Status・Settings" may be selected. ※Care Menu is limited during Baby Stage.

## Status·Settings

Check Tamagotchi's stats and change Unit settings!

First, Touch the Item you'd like to open.

**Scroll**
Slide Up and Down

### Status

See how Tamagotchi is doing. Frequent checks help inform caretaking!

**<Fondness>** Indicates how deep Tamagotchi's bond is with you (The farther right the heart is, the more fond they are of you; the farther left, the less familiar they are with you)
**<Hunger Meter>** Shows hunger level
**<Gotchi Points>** Tamagotchi Planet's currency (Max. 99,999 GP)

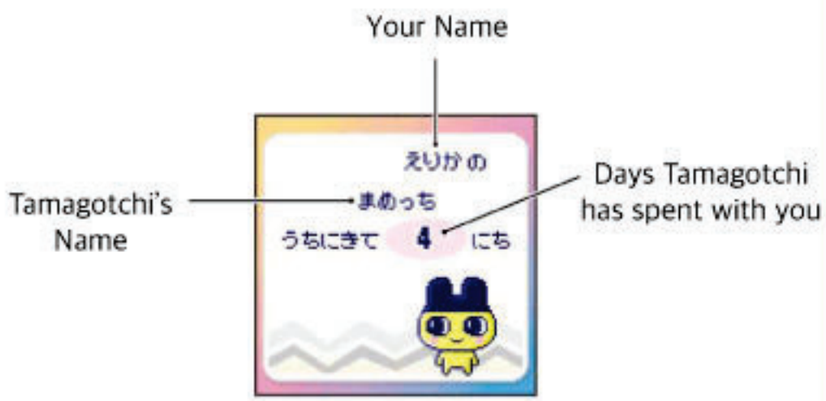


**Scroll**
Slide Up and Down

## Memories
(メモリー)

### A record of the Tamagotchi you've raised!

First, Touch the record you want to see.

### Tamagotchi Memories
(たまごっちメモリー)

Revisit the records of Tamagotchi you've raised up until now! Tamagotchi Memories record the previous 5 Generations (excluding current Tamagotchi). Earlier Generations are erased and written over.

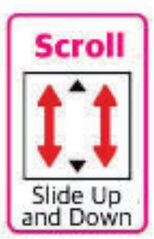


### Fondness Icons
(なつきアイコン)

See all the Fondness Icons you've received up until now!
You can save up to 24 Fondness Icons from characters downloaded from TamaSmaCards.

### About Fondness Icons

If you spend enough time with a Tamagotchi that's especially fond of you, you may receive a "Fondness Icon"

※Translator's note: Given after 72 hours at Max Fondness in Friend Stage

## Settings
(せってい)

### You can change the Tamagotchi Smart Unit settings!

First, Touch the setting you want to check.

### Sound Settings
(サウンドせってい)

Touch「オフ」to turn sound Off.
Touch「オン」to turn sound On.

※Please note that Alert sounds and Touch sound effects will not play if sound is Off.

### Battery Check
(でんちかくにん)

Know your Battery Status!

Charge in Progress

Fully Charged!

●Battery in Use

Charge: High

Charge: Mid

Charge: Low

Needs Charge!

### Set Clock
(とけいせってい)

Adjust Date and Time.

Check P.4 **[Initial Setup]** for how to adjust.

### Brightness
(あかるさせってい)

Adjust Screen Brightness by Touching the Left and Right Arrows.

※Translator's note: 4 Levels total

## Connect Icon
(ツーしん アイコン)

### You can set your Nickname and Icon for Connection Play.

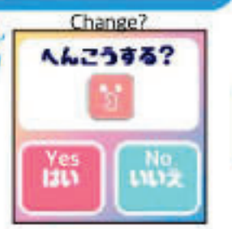


Pick「はい」to change Icon

Pick Icon's Face and Color.

Set your Nickname!
(See P.5 **[Letter Input]** for details)

Your Nickname can be up to 2 Letters.
Your Tamagotchi might call you by this name during Connection Play!?

●Set Nickname and Icon before Connection Play.
※If not set before Link Play, the first 2 Letters of the name input during Initial Settings will be set as your Nickname.
●Nickname and Icon can be changed. When you only want to change your Nickname, set Icon to match current choice, then change Nickname.

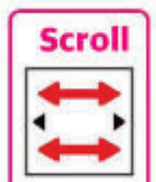

# Assistance

## When Tamagotchi gets sick, heal them quickly!

First, touch the action you'd like to perform.

**Scroll**
Slide Up and Down

### If Tamagotchi looks like this, hurry with "Assistance"!

**Sickness**

Tamagotchi Flu　　Cavity

**Tamagotchi is dying!?**

Grim Gotchi appeared!

Call an ambulance and head straight for the Hospital!

If you leave your Tamagotchi sick for too long, or don't take frequent care of them, Reapertchi may appear.
If you see the Grim Gotchi hanging around, hurry and open the "Assistance" menu to summon an Ambulance!

**Oops, they died...**

If your Tamagotchi dies, you'll see the "Death Screen". Touch the screen to see the profile of the Tamagotchi who died.
To raise a new Tamagotchi, hold down the Home Button until a new egg appears, then tap the egg to hatch a Tamagotchi.
※Items and such will transfer to the new Tamagotchi (with some exceptions).

**Abandonment**

Preparing to leave

**Tamagotchi is running away!?**

They're packing their bags!

Stop them quickly!

If you leave your Tamagotchi with too low a "Fondness" level, they may attempt to run away.
When you notice them packing their bags, hurry and stop them with the "Assistance" icon!

**Oh, they ran away...**

Dear Erika,
I wish you'd paid more attention to me
...Farewell..
Mametchi

If your Tamagotchi runs away from home, you'll see the "Letter Screen". Touch the screen to see the profile of the Tamagotchi who ran away.
To raise a new Tamagotchi, hold down the Home Button until a new egg appears, then tap the egg to hatch a Tamagotchi.
※Items and such will transfer to the new Tamagotchi (with some exceptions).

## HouseSit

### Task them with HouseSitting when you can't care for them yourself!

Touch the Screen

- Tamagotchi can be asked to HouseSit between 7 AM and 5:59 PM.
- To end HouseSitting, touch the screen. When「かえる?」is displayed, pick「はい」(Yes).
- Tamagotchi can't HouseSit if Hunger Meter is at 0 or "Medicine" is required due to illness.
- Tamagotchi can't HouseSit during the Baby Stage.

Make sure to come home before it gets dark!
If you're not home by nightfall, Tamagotchi will be offended and "Fondness" will decrease.

## SmaSpitchi

### Get lots of advice!

SmaSpitchi

SmaSpitchi (スマスピッチ) will teach you all sorts of things. They may inform you of seasonal events and special sales!

## Meal・Snack

**When they're hungry or their "Fondness" is down, feed them a meal!**

First, Touch to select the food category.

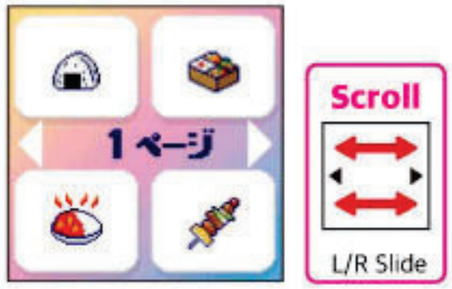


Touch the food you'd like to feed to Tamagotchi.

Touch「あげる」(Give) to feed!

- When you feed them a Meal the Hunger Meter fills, and a Snack increases their "Fondness"!
- Each Tamagotchi has its own likes and dislikes, so try feeding them lots of different things!
- Items that display a number represent Quantity Owned. This number will decrease by 1 every time it is eaten.
- Items without a number displayed will never run out!

### TamaSmaCard Icon

If an Item has been downloaded from a TamaSma Card, you'll see an icon like this! The icon varies by TamaSma Card type. Check P.16 for more about TamaSma Cards!

## Toilet・Bath

**Take Tamagotchi here when they look like they're going to Poop, or when their body gets dirty.**

First, Touch where you'd like them to go.

### Toilet

For before (or after) Tamagotchi Poops!

When Tamagotchi fidgets like they have to Poop, send them to the Toilet!
If they Poop in their Room, selecting the "Toilet・Bath" icon will clean it up!

### Bath

For when things get messy!

Give Tamagotchi a bath!
If you don't wash them for several days, they get grubby. They can't Go Out if they're not clean and will be scolded by SmaSpitchi, so be diligent!

# Possessions

## All the Items you've obtained are stored here!

First, Touch to select category

**Scroll**
Slide Up and Down

## Items — Use the Items you have!

Touch the Item you'd like to use

Touch「つかう」to use the Item selected

- Using an Item repeatedly will cause it to eventually break.
- Items with a number displayed will reduce in quantity by 1 upon breaking.
- Items without a number displayed will never break!

※Cleaning Robot (おそうじロボ), Picture Book (えほん), and Ball (ボール) will never break.

### Cleaning Robot

Using the Cleaning Robot will freshen up your Room!
If you don't clean every few days, it'll get gross!

## Accessories — Decorate Tamagotchi with Accessories!

Touch what you'd like them to wear

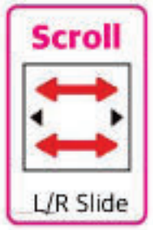

Touch「つける」(Attach) to have them wear the accessory.

To remove current accessory in use, Touch「はずす」(Remove).

- Using an Item repeatedly will cause it to eventually break.
- Accessories with a number displayed will reduce in quantity by 1 upon breaking.
- Accessories without a number displayed will never break!
- Accessories can be worn from Kid Stage onward.

## Treasure — Find Special Items here!

Touch the item you'd like to use

Touch「つかう」to use the item selected

※You can own up to 4 types of Treasures (たかもの). Once you obtain a 5th, you will have to select and dispose of one you already have.

※Treasures don't break!

※Treasure graphics are still in development.

# App Apps

## Use Apps to shop for Items and meet other Tamagotchi!

First, Touch the App you'd like to use.

NEEDED
- **FREE** items cost 0 Gotchi Points!
- **SALE** items cost less than usual!

## TamaDelivery — Get food delivered!

NEEDED

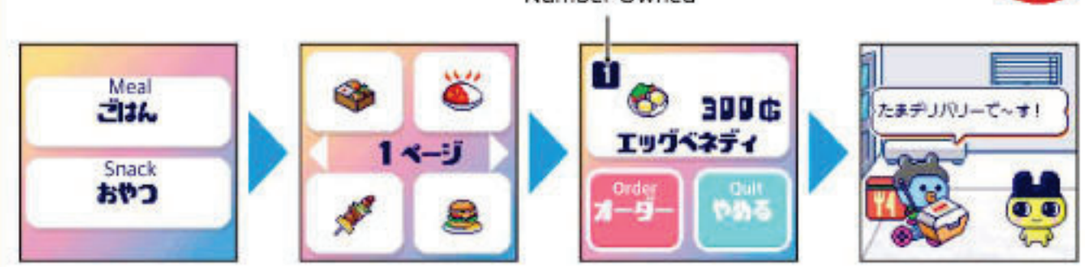


Touch the category you'd like to buy. | Touch the food you'd like delivered. | Touch「オーダー」to confirm Order. | Special Delivery!

Scroll — L/R Slide

- You can have up to 3 of the same item at a time. Don't get greedy!
- The 5th, 15th, and 25th of every month are SALE days! All prices half-off!!

## TamaShopping — Shop "Online"! Remodeling, too!

NEEDED

First, Touch the category to buy.

Scroll — Up/Down Slide

- You can have up to 3 of the same item. Don't get greedy!
- The 10th, 20th, and 30th of every month are SALE days! All prices half-off!!

### Items

You can buy lots of fun Items!

Scroll — L/R Slide

What'll you get? | Touch「かう」to Buy! | Special Delivery!

### Accessories

Make Tamagotchi stylish!

Scroll — L/R Slide

What'll you get? | Touch「かう」to Buy! | Special Delivery!

### Remodel

Remodel (たまリフォーム) your Living Room!

Scroll — L/R Slide

Pick a Living Room | Touch「はい」to confirm! | Remodeling Done!

## TaMatching App — Marry and begin the next Generation!

Pick the partner you'd like to date | Touch「デートする」to go on a date if you like their profile! | If they get friendly while dating, they may ask to get married! Touch「はい」to give your blessing! | When 2 Tamagotchi wed, an egg appears and the next Generation of Tamagotchi is born!

※Baby Stage, Kid Stage, Young Stage Tamagotchi cannot use this App.

## TamaSelfie — Take Selfie Photos!

Touch what you'd like to do.

Scroll — Up/Down Slide

### Photoshoot

※Some facial expressions are not available for Kid Stage, Young Stage, or TamaSma Card DL characters.

Pick a Frame! | Pick a Face! | Apply Stickers!

Scroll — L/R Slide

### Album

View the Photos you've taken!

Delete photo: Touch Area A
View next; Slide Areas CD
※Album max. 4 photos.

Scroll — L/R Slide

# Go Out

**You can go play in the park! If you get part-time job you can earn Gotchi Points!**

First, Touch where you'd like to go.

## Park

**Lots of fun activities are waiting in the Park!**

Meet lots of Tamagotchi!

Seasonal Events, too!

You can also receive TamaSelfie Frames!

### Mini-Games happen in the Park!

Follow on-screen instructions to Play!

## TamaWork

**Work hard at part-time jobs and get Gotchi Points!!**

Part-time jobs are Mini-Games. Touch the one you'd like to try!

**Scroll**

Up/Down Slide

### <Memorize Drinks>

**Remember the Order!**

Memorize customer orders and make drinks to their specifications!
Touch to select a Drink, Cream, and 2 Toppings.
If you get the order right, you win!
If you mess up the order, you lose.

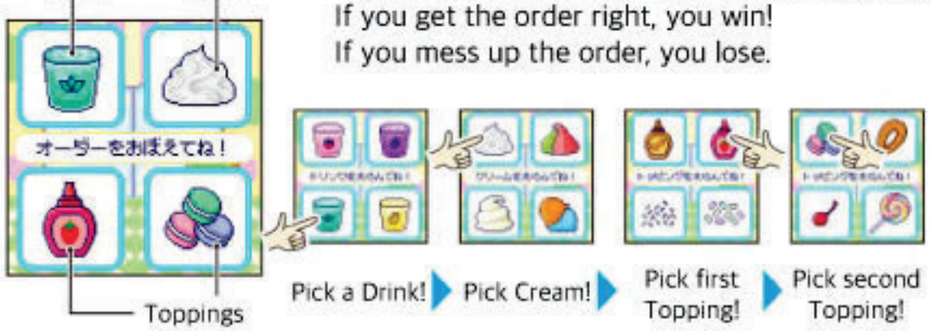


### <Move♪Dance>

Let's dance to the music♪ Do the move indicated while the music plays and the「おどってね！」(Dance!) screen is shown. You will be instructed to do 1 of 3 dance moves. If you groove correctly until the music stops, you win!

**※Wear on Left Wrist to play!**

Raise your arm and wave it left and right♪

Move your arms up and down♪

Roll your hands♪

### <Food Delivery>

Deliver customer orders!
Swerve left and right to avoid obstacles like banana peels, traffic cones, and puddles.
You win if you can reach the Goal without hitting any obstacles!

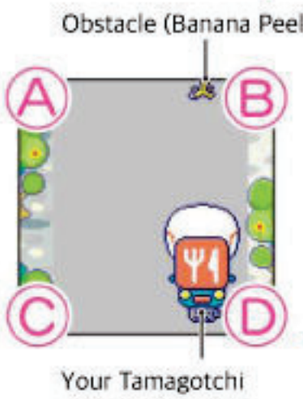


**Touch C·D Areas to Move Left and Right!**

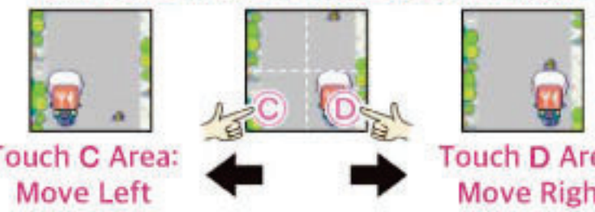


### <TamaPet Salon>

Become a groomer at the TamaPet Salon and wash Shampootchi 'til they're clean!
When the game starts, shake the Unit!
The more you shake, the more suds bubble up.
You win if you get Shampootchi squeaky clean!

**When the game starts, Shake the Tamagotchi Smart Unit like crazy!**

※Time Limit shown in top right corner at Game Start

# Connect

Play with other Tamagotchi Smarts, or Download from TamaSma Cards!

First, Touch what you would like to Connect with.

## Tamagotchi Smart

Link Play between Tamagotchi Smarts!

### Connection Instructions and Warnings

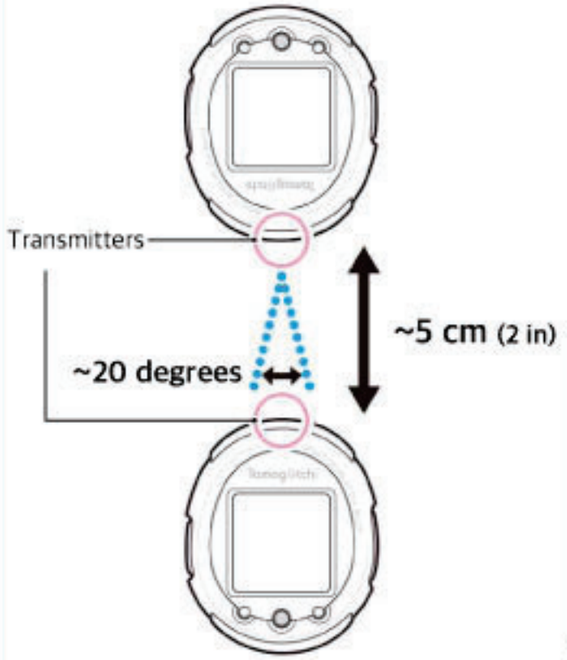


Make sure the Tamagotchis' Transmitters are at a parallel height, separated by the distance shown in lefthand diagram.
※Connection will not work around loud sounds (see Translator's Note below)
※Connection cannot connect with Tamagotchi Units other than the "Tamagotchi Smart"
※If one Unit fails or connection times out, select「はなしをする」(Talk) or 「はなしをきく」(Listen) to return to selection screen. Then restart the Link process with both Units.
※Translator's note: Connection utilizes ultrasonic transmission picked up by Unit's microphone that is affected by noise interference.

#### ●Keep an eye on the Screen during Link Play!

When this screen disappears, it's OK to separate the Transmitters.
※Don't press the Home Button while this screen is displayed!

Connection doesn't work when the battery charge is too low.

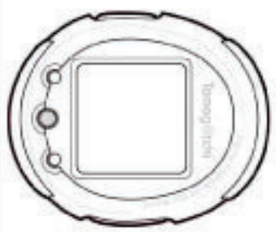

Set the Tamagotchi Smarts facing each other for standby.

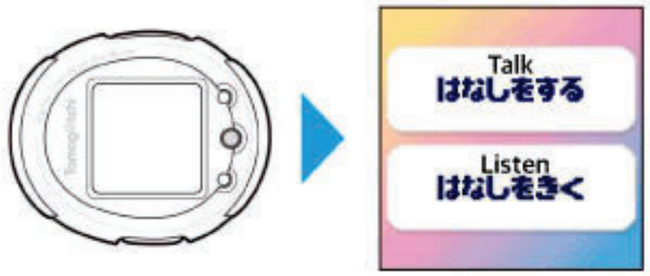


Have both people open the Connect Menu and select "Tamagotchi Smart". Have 1 person Touch「はなしをする」(Talk), and the other Touch「はなしをきく」(Listen).

Link in progress.
**※This takes around 60~90 seconds.**

If Connection succeeds, the 2 Tamagotchi will start chatting!
※Depending on the other person's Tamagotchi, yours may go out to meet them.
●People you Connect with are saved in the "Friends List" (→P.18).

Pick your nickname before Connecting!
Check out **[Connect Icon]** (→P.9) for details!

**Scroll**
Slide Up and Down

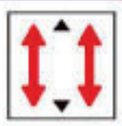

## TamaSma Card

### TamaSma Card:

A download card that contains Tamagotchi to raise and various items.
Insert it into the Tamagotchi Smart Unit to make it fit your style♪

Read Data on the Tamagotchi Smart to Play!

**Change Style of Items and Clock**

Items inspired by Classic Tamagotchi!

**Add Raisable Characters**

More Tamagotchi to Raise!

## Download from TamaSma Card

※If the Tamagotchi character you're raising is a Friend Stage from a TamaSma Card, you can't delete or download new TamaSma Card data.

First, Touch the action you'd like to perform.

### Download

#### ①Insert TamaSmaCard

Remove TamaSmaCard from Unit

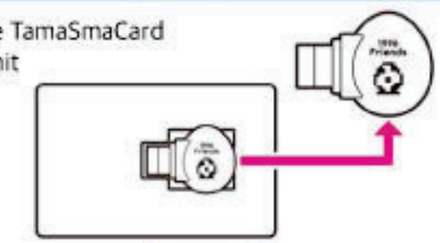

Use fingertip to open TamaSmaCard Port cover, then insert TamaSmaCard. As shown in diagram to the right, face screen upward and plug Card into the Tamagotchi Smart Unit.

#### ②Choose Download! ③Downloading...

※Do not attempt when battery is low. Only use when adequately charged.
※Do not press the Reset Button while a Tama-Sma Card is plugged in.
※Do not remove the TamaSma Card while download is in progress.

#### ④Download Successful!

When the download succeeds, the Guide Tamagotchi will appear and announce the addition of items and part-time jobs.

#### If it fails...

The screen above will appear if the TamaSma Card download fails.
Try again from Step ②.

### When a TamaSmaCard is already Installed

If you attempt to download from a TamaSma Card if you've already downloaded from a different TamaSma Card, you'll see the screen to the left!
※When you download the new TamaSma Card's data, the previous TamaSma Card data (Meals, Snacks, Items, Accessories,and other elements downloaded from the TamaSma Card) will be deleted.

**Scroll**

Slide Up and Down

## Downloaded TamaSma Card

Confirm the type of TamaSma Card installed.
- Screen design varies based on TamaSma Card type.
- Touch the left screen to delete the downloaded TamaSma Card data.

## Troubleshooting

### If TamaSma Card was not inserted propertly

If the TamaSma Card you tried to download wasn't properly inserted, you'll see the screen to the left.
Make sure to plug it in firmly.

### If already linked to 3 Tamagotchi Smarts (previously downloaded)

A TamaSma Card can be used with up to 3 Tamagotchi Smarts.
If you try to download it to a 4th Tamagotchi Smart, the screen to the left will appear.

## Items Downloaded from TamaSma Card

### TamaSma Card Download Items display a special icon!

#### TamaSmaCard Icon

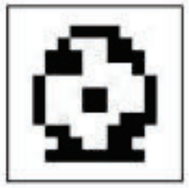

Things you've downloaded from a TamaSmaCard will have a special TamaSmaCard icon like this one!
The icon design will change based on the different kinds of TamaSmartCards.

### Download Item Save Locations

- 4 Meals ⇒ TamaDelivery
- 4 Snacks ⇒ TamaDelivery
- 4 Accessories ⇒ TamaShopping
- 4 Rooms ⇒ TamaShopping
- 4 Items ⇒ TamaShopping
- 1 Mini-Game ⇒ TamaWork

### 3 Clock Designs

<Clock Screen>

Slide screen
C→A or D→B

Change Clock Design

After Sliding, you'll see 3 new clock designs to choose from!

If you use these special items during the Baby, Kid, and Young Stages, your Tamagotchi may grow into one of the characters downloaded from the TamaSma Card!

You can save up to 24 Fondness Icons from TamaSma Card characters. If you receive more than that, they will be deleted and overwritten starting with the oldest Fondness Icon received.

## How to Play the TamaSma Card (1996 Friends) Mini-Game

### <Hey, Look Here> (こっちむいてホイ)

When the arrow appears, pick the direction you think Tamagotchi will face!

If you think Tamagotchi will face Left, Touch Area **C**
If you think Tamagotchi will face Right, Touch Area **D**!
You get a point if Tamagotchi looks in the direction you choose.

### Downloaded games are stored in the "TamaWork" list!

※Translator's Note: Downloaded game will be the first choice listed in the TamaWork menu.

## Friends List

### Keep a record of the Friends you Connect with!

See the Names and Icons of Friends you have Connected with before!

Up to 6 Friends can be registered.
When you Connect with a 7th Friend, a screen will appear and instruct you to Part Ways to 1 Friend of your choosing.
Touch the name of the Friend to remove from the list, then Touch 「はい」(Yes) to confirm.

## Troubleshooting

- **Two Tamagotchis won't Connect!**
  →Reference **[Connection]**. (→P.15)
- **The LCD screen is hard to see!**
  →Adjust the Screen brightness. (→P.9)
- **It's not making any sounds!**
  →Open "Sound Settings" and select "On". (→P.9)
- **It's not responding to Touches and Slides!**
  →To Touch, you must hold your finger in place for at least 1 second. To Slide, lightly move your finger along the 4 Touch Panel Areas according to the action you wish to perform. (→P.3)
- **The screen turns completely black (or white), or the sound stops working and the Home Button won't respond when pressed, or nothing happens when I press the Reset Button!**
  →Battery power may be low. (Battery may run out without displaying "Low Batt Screen".) See **[Charging the Unit]** and charge. (→P.4)
- **Tamagotchi won't wake up/go to sleep!**
  →Tamagotchi will wake up and sleep on their own at pre-determined times. Confirm the clock settings to make sure the time is set correctly. (→P.5)
  If AM/PM are set incorrectly, Tamagotchi will experience day and night at opposite times, affecting their daily routine.

## When to Press the Reset Button

●If a strong impact (or similar action) cause all functions to stop working, or when the Screen looks weird.

Continue/Erase Data Selection Screen

When the Reset Button is pressed, a Continue/Erase Data selection screen will appear.

●Select「つづきから」(Continue) to continue raising the current Tamagotchi. Once the screen display has returned to normal, update the clock to the current time and date using method described in "Clock Settings" (→P.9).

●Select「データをけす」(Erase Data) to raise a new Tamagotchi. Then, when you set the clock and register your birthday and name, a new egg will appear and a short time later a new Tamagotchi will hatch.

※Warning: When you select Erase Data, all Memories and Items (Meals, Accessories, etc.) will be erased and the Unit returned to factory settings.

※If battery dies and Screen turns off while displaying the Continue/Erase Data Selection Screen, Unit will automatically Continue from existing data.

## Charging Without a Computer: Approved USB Charging Adapters (Information Current as of August 2021)

BANDAI has confirmed the USB Charging Adapters below to be compatible with the Tamagotchi Smart.

※Translator's Note: Japan's AC power runs at 100V. Please confirm your country's electrical voltage and make sure Adapter contains a step-down switching regulator so you don't fry your Tama!

### ■Anker Japan Co., Ltd.

Anker PowerPort mini

Anker PowerPort 2 Elite

### ■ELECOM CO., LTD.

AVA-ACUAN007

MPA-ACU07

### ■Sanwa Supply Inc.

ACAIP49 Series

ACAIP55BK

※Only use the cable packaged with the Tamagotchi Smart to charge the Unit.

※To confirm market availability of the adapters shown, please either consult each manufacturer's homepage or inquire at your local shop.

※BANDAI has confirmed the compatibility of the products above, but is not liable for incompatibility or other issues that may arise from their use.

※Operate each product above correctly by reading the corresponding User Manuals.

※BANDAI confirmed compatibility of the above products independently, so do not contact the manufacturers asking about the Tamagotchi Smart.

**Translator's Note: Thanks for reading and ENJOY your Tamagotchi Smart!**